

PRO
SERIES



 NEWSKILL

GUNGNYR PRO

QUICK GUIDE

PROFESSIONAL OPTO-MECHANICAL RGB GAMING KEYBOARD

How to change switch



Keycap puller




Switch puller




A

Insert the keycap puller and pull out the key cap

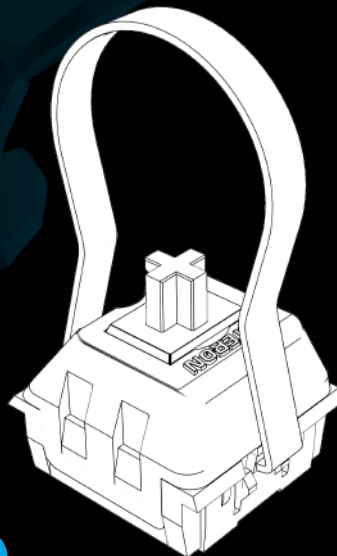

B

Insert the switch puller, align the hole and pull out the switch

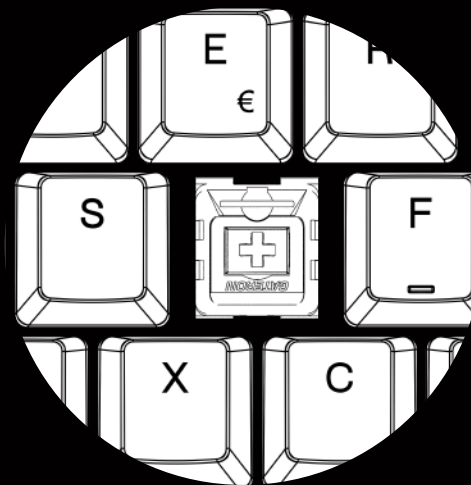

C

Insert the switch and press down until it "clicks", please note that the word GATERON should be facing down



Fn combination keys

E.g. = F1 + = Open the music

+ F1	Open the music	+ F9	My computer	+ ← / →	Light speed reduce/increase	+ Del	Five sets of custom lighting mode recording functions: A. Press Fn+8*/9(/0)/-_/+= to select any group: B. Press Fn+Del again and the light flashes. C. Choose your own light color. D. Press Fn+De to save the Settings
+ F2	Volume -	+ F10	Search	+ PrtSc	Swich ambient light mode		
+ F3	Volume +	+ F11	Calculator	+ Ins	Peripheral light speed adjustment		
+ F4	Mute	+ F12	Lock/open keyboard	+ Pause	Arm rest light mode switch		
+ F5	Stop	+ Esc	Restore to default(hold 3s)	+ Pgup	Arm rest light speed adjustment		
+ F6	Last song	+ 1~6	Light mode	+ WinLock	Open/close the windows		
+ F7	Next song	+ 7	Light color switch	+ `~	Key area light mode cycle switch		
+ F8	Play/pause	+ ↑/↓	Increase/reduce light intesity				