




 newskill

THANATOS

MECHANICAL GAMING KEYBOARD

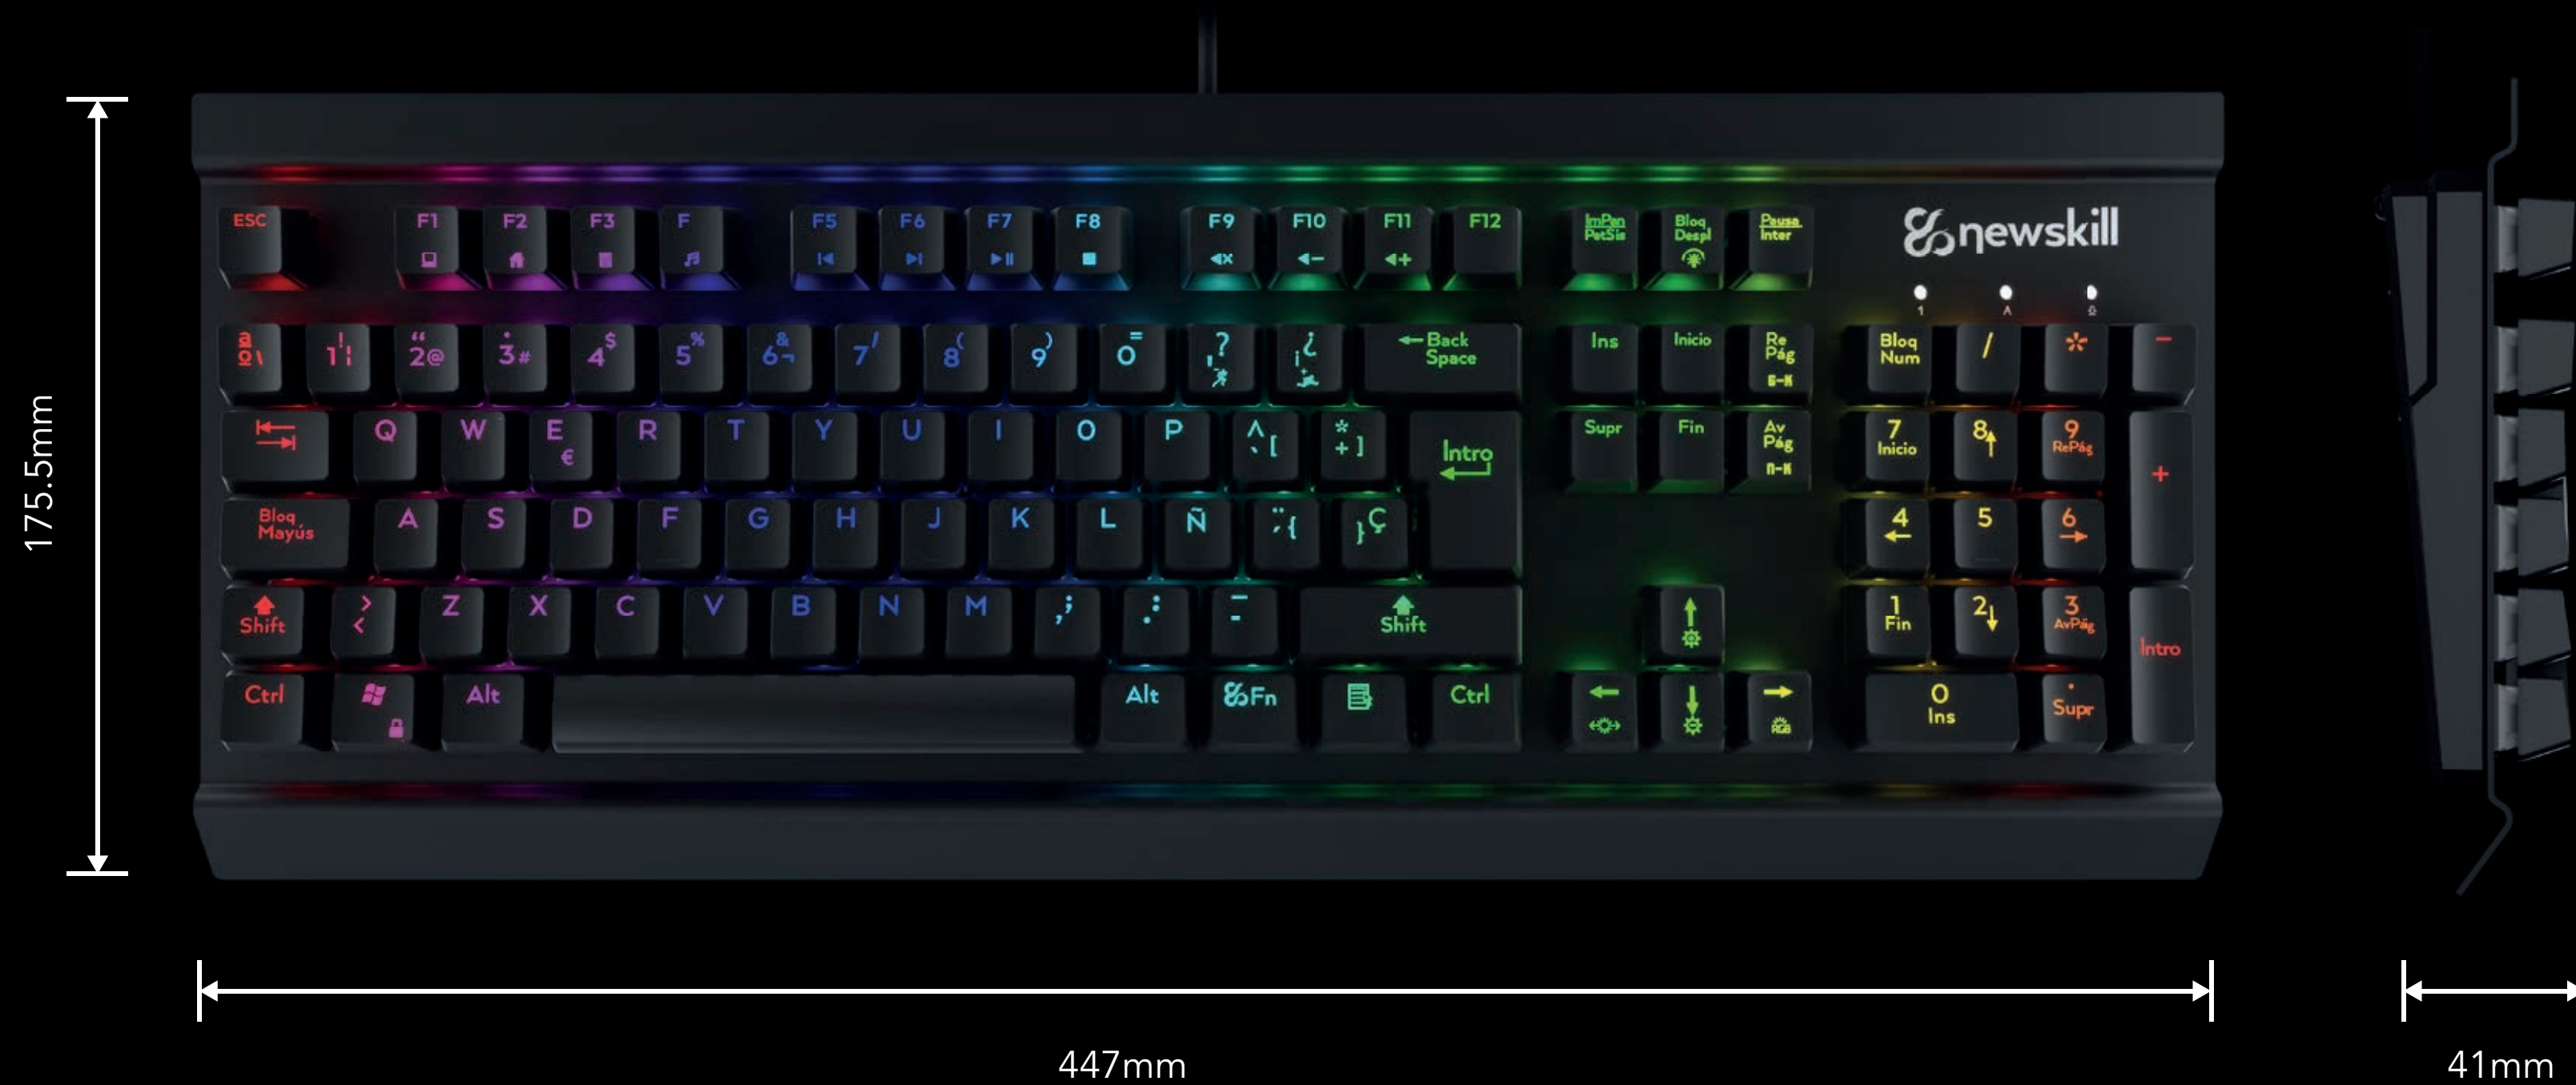

KEYBOARD SPECIFICATIONS

Voltage : $5.0 \pm 0.25V$

Polling rate: 1000Hz

1.8M cable length

USB connection type

Estimated life of the mechanisms: 50M of pulsations

Dimensions of the keyboard: 447 (L) *175.5 (W) *41 (H) mm

Weight: $1200 \pm 30g$

MAIN CHARACTERISTICS

1. USB Full Speed 2.0, 1000Hz sounding speed
2. N-Key Rollover
3. Compatible with Win2000, Win XP, Win ME, Vista, Win7, Win8, Android, linux
4. By default when connecting the keyboard its default mode is Ola Spectrum.
5. Total has 11 patterns as below
combination key FN+ "Scroll" switch different 10 LED mode.
 - (1) Wave Marquee
 - (2) Ripple
 - (3) Breathing
 - (4) Full LED on
 - (5) Trigger
 - (6) Firework
 - (7) Radiation
 - (8) Cyclone
 - (9) Scan mode
 - (10) Full LED off
 - (11) Support 10 sets custom modes

WAYS TO CONFIGURE LIGHTING

FN + "1-5" are 5 factory default backlight modes.

FN + "6-0" are 5 modes that the user can define.

Select any number from 6 to 0 by pressing FN plus the desired number.

Once the number is selected, press the FN + "~" key, the keyboard enters the user definition mode.

The "print" key will start to flash, users will be able to set their own LED light mode, press FN + "→" to change the color of the lighting.

MACRO CONFIGURATION

FN + Win, enters game state. In this mode, press FN + Esc, "WINDOWS" and the "Esc" keys will be illuminated. Select the key you want, and press it at the same time as FN. The LEDs will start flashing, set your macro to taste and once finished repeat the same operation FN + key assigned to save the macro.

For example, macro "Q", press FN + Q, the LED light will flash, program the macro and press FN + Q again to save.

1. FN+ ↑ ,increase LED brightness
2. FN+ ↓ ,decrease LED brightness
3. FN+←, LED direction change
4. FN+→, LED color selection
5. FN+"-",decrease led speed
6. FN+"+", increase led speed
7. FN+W, Press FN+W can exchange WASD and ↑ ↓ ← →
8. FN+Win, windows lock function. Press again unlock
9. FN+PU, N-keys conflict free and 6 keys conflict free switch
10. Press FN+ ESC, then press F1, F3, F5 to restore factory setting

MULTIMEDIA FUNCTION

FN + F1= PC

FN + F2= Start

FN + F3= Calculator

FN + F4= Audio

FN + F5= Previous Track

FN + F6= Next Track

FN + F7= Play/Pause

FN + F8= Stop playback

FN + F9= Silence

FN + F10= Volume-

FN + F11= Volume+



THANATOS

MECHANICAL GAMING KEYBOARD